OWNER'S MANUAL / SAFETY INSTRUCTIONS / COMPLIANCE INFORMATION

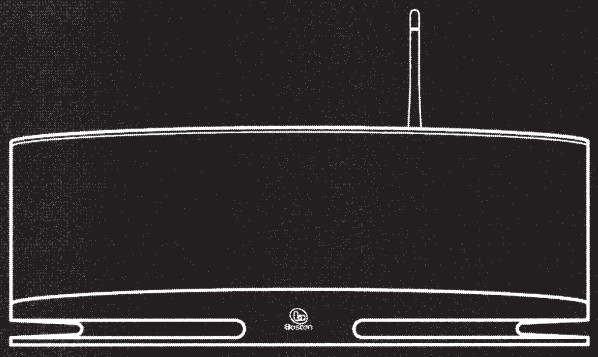

MC200Air

Wireless Speaker System for AirPlay

Français

Système d'enceintes sans fil pour AirPlay

MANUEL DE L'UTILISATEUR / INSTRUCTIONS DE SÉCURITÉ / INFORMATIONS SUR LA CONFORMITÉ

Italiano

Altoparlante wireless per AirPlay

MANUALE DELL'UTENTE / ISTRUZIONI DI SICUREZZA / INFORMAZIONI SULLA CONFORMITÀ

Deutsch

Drahtlos-Lautsprechersystem für AirPlay

BEDIENUNGSANLEITUNG / SICHERHEITSHINWEISE / KONFORMITÄTSERKLÄRUNG

Español

Sistema de parlantes inalámbricos para AirPlay

MANUAL DEL PROPIETARIO/ INSTRUCCIONES DE SEGURIDAD / INFORMACIÓN DE CUMPLIMIENTO

Svenska

Trådlöst högtalarsystem för AirPlay

BRUKSANVISNING / SÄKERHETSINSTRUKTIONER / INFORMATION OM ÖVERENSSTÄMMELSE

Boston acoustics®

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

IC STATEMENT

English:
1. This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the
device.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
French:
1. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio
exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne
doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage
2. radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

©2012 Boston Acoustics, Inc. Boston, Boston Acoustics, the B/A ellipse symbol, and BassTrac are registered trademarks of Boston Acoustics, Inc.
AirPlay, iPad, iPhone, iPod, and Safari are trademarks of Apple Inc., registered in the U.S. and other countries.
Firefox and Mozilla are registered trademarks of the Mozilla Foundation.
Microsoft and Internet Explorer are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Wi-Fi is a registered trademark of the Wi-Fi Alliance.
DLNA is a registered trademark of Digital Living Network Alliance.
Specifications are subject to change without notice.
All rights reserved.
Unauthorized use is strictly prohibited.

©2012 Boston Acoustics, Inc. Boston, Boston Acoustics, le symbole en ellipse B/A et BassTrac sont des marques déposées de Boston Acoustics, Inc.
AirPlay, iPad, iPhone, iPod et Safari sont des marques de commerce d'Apple Inc., qui sont déposées aux États-Unis et dans d'autres pays.
Firefox et Mozilla sont des marques déposées de Mozilla Foundation.
Microsoft et Internet Explorer sont des marques déposées ou des marques de commerce de Microsoft Corporation aux États-Unis et/ou dans d'autres pays.
Wi-Fi est une marque déposée de Wi-Fi Alliance.
DLNA est une marque déposée de Digital Living Network Alliance.
Les spécifications peuvent être modifiées sans préavis.
Tous droits réservés.
Toute utilisation non autorisée est formellement interdite.

©2012 Boston Acoustics, Inc. Boston, Boston Acoustics, el símbolo de elipse de B/A y BassTrac son marcas registradas de Boston Acoustics, Inc.
AirPlay, iPad, iPhone, iPod, y Safari son marcas registradas de Apple Inc., registradas en Estados Unidos y otros países.
Firefox y Mozilla son marcas registradas de Mozilla Foundation.
Microsoft e Internet Explorer son marcas registradas o marcas comerciales de Microsoft Corporation en los Estados Unidos y/o en otros países. Wi-Fi es una marca registrada de la Wi-Fi Alliance.
DLNA es una marca registrada de Digital Living Network Alliance.
Las especificaciones están sujetas a cambios sin previo aviso.
Todos los derechos reservados.
Queda estrictamente prohibido todo uso no autorizado.

©2012 Boston Acoustics, Inc. Boston, Boston Acoustics, il simbolo dell'ellissi B/A e BassTrac sono marchi registrati di Boston Acoustics, Inc.
AirPlay, iPad, iPhone, iPod e Safari sono marchi di fabbrica di Apple Inc., registrati negli Stati Uniti e in altri Paesi.
Firefox e Mozilla sono marchi registrati di Mozilla Foundation.
Microsoft e Internet Explorer sono marchi di fabbrica registrati di Microsoft Corporation negli Stati Uniti e/o in altri Paesi.
Wi-Fi è un marchio di fabbrica registrato della Wi-Fi Alliance.
DLNA è un marchio di fabbrica registrato della Digital Living Network Alliance.
Le specifiche sono soggette a variazioni senza preavviso.
Tutti i diritti riservati.
L'utilizzo non autorizzato è severamente proibito.

©2012 Boston Acoustics, Inc. Boston, Boston Acoustics, B/A-ellipssymbolen och BassTrac är registrerade varumärken tillhörande Boston Acoustics, Inc.
AirPlay, iPad, iPhone, iPod, and Safari är varumärken tillhörande Apple Inc., registrerade i USA och i andra länder.
Firefox och Mozilla är registrerade varumärken tillhörande Mozilla Foundation.
Microsoft och Internet Explorer är registrerade varumärken eller varumärken tillhörande Microsoft Corporation i USA och/eller i andra länder.
Wi-Fi är ett registrerat varumärke tillhörande Wi-Fi Alliance.
DLNA är ett registrerat varumärke tillhörande Digital Living Network Alliance.
Speficikationerna kan ändras utan förvarning.
Alla rättigheter förbehålls.
Oaktoriserat bruk är strängt förbjudet.

©2012 Boston Acoustics, Inc. Boston, Boston Acoustics, das B/A Ellipsensymbol und BassTrac sind eingetragene Marken von Boston Acoustics, Inc.
AirPlay, iPad, iPhone, iPod und Safari sind Marken von Apple Inc., die in den USA und anderen Ländern eingetragen sind.
Firefox und Mozilla sind eingetragene Marken der Mozilla Foundation.
Microsoft und Internet Explorer sind eingetragene Marken der Microsoft Corporation in den USA und/oder anderen Ländern.
Wi-Fi ist eine eingetragene Marke der Wi-Fi Alliance.
DLNA ist eine eingetragene Marke der Digital Living Network Alliance.
Spezifikationen können ohne vorherige Ankündigung Änderungen unterliegen.
Alle Rechte vorbehalten.
Die Nutzung durch Unbefugte ist streng verboten.

IMPORTANT SAFETY INSTRUCTIONS

This symbol found on the apparatus indicates hazards arising from dangerous voltages.

This symbol found on the apparatus indicates the user should read all safety statements found in the user manual.

This symbol found on the apparatus indicates double insulation.

Warning! To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Maintain a minimum distance of 2" (50mm) around the front, rear, and sides of the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings or placing on or around the apparatus items such as newspapers, table-cloths, curtains, etc.
15. No open flame sources, such as lighted candles, should be placed on the apparatus.
16. The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
17. Either the power inlet connector on the rear of the apparatus or the power plug at the wall must remain accessible, to be able to disconnect power from the apparatus.
18. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.

American Users:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Unauthorized changes or modifications to the receiver could void user's authority to operate the equipment.

Canadian User:

This class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de classe B est conforme á la norme NMB-003 du Canada.

This equipment may only be used indoors in FR.
This equipment may only be used in one's own premises in IT.
This equipment is for private use only in LU
Operation is not allowed within a radius of 20 km from the centre of Ny-Ålesund in NO.

European Users: CE ⓘ

RLAN - Radio Local Area Network Equipment

AT	CZ	FI	IS	LT	PT	SE	FR
BE	DK	DE	IE	MT	SK	CH	IT
EE	GR	LV	NL	SI	TR	LU	CY
HU	PL	ES	GB	NO			

Hereby, Boston Acoustics, Inc., 7 Constitution Way, Woburn, MA 01801 USA, declares that this MC200Air is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity (DOC) may be obtained from:

Oliver Kriete
Boston Acoustics, Division of D&M Europe B.V.
Beemdstraat 11
5653 MA Eindhoven
The Netherlands

Designed in USA
Made in China
Boston Acoustics, Inc., Woburn, MA USA

Introduction

Thank you for choosing Boston Acoustics and congratulations on your purchase of the MC200Air wireless speaker system for AirPlay. AirPlay wireless technology lets you stream your favorite music from your Wi-Fi connected Windows PC or Apple Macintosh using iTunes, or your iPad, iPod Touch, or iPhone device to your MC200Air Speaker System. There is also an auxiliary analog input so you can connect older music sources to the MC200Air. We know you'll enjoy it for years to come.

Key Features

- Great room-filling sound from a sleek compact design
- AirPlay wireless audio streaming
- Boston's BassTrac® circuitry for more bass without distortion
- Support for audio streaming from compatible DLNA* devices and software, such as Windows Media Player, Android, music servers, etc.
- Connects to your home Wi-Fi network or Ethernet
- Boston-designed 3 1/2" high performance drivers
- Remote control included
- AUX input allows you to connect a local source
- Integrated keyhole mounts for easy wall-mounting
- USB connection for connecting and charging iOS devices while you play music

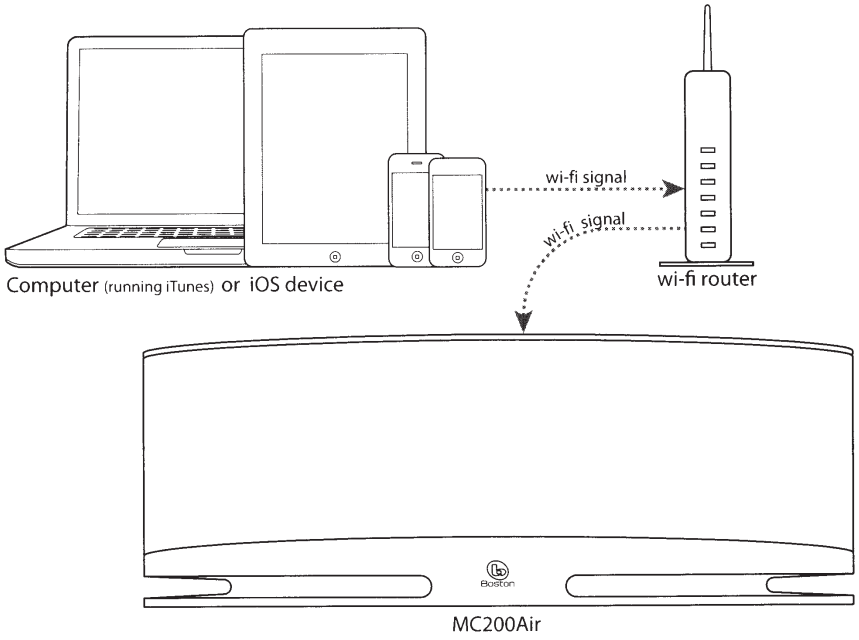

Optional Wired Inputs

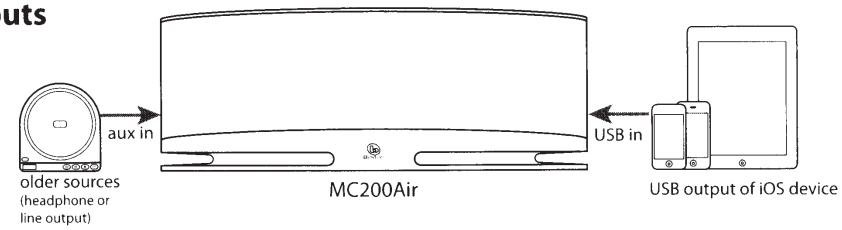

* Note: DLNA functionality is not well standardized across all "DLNA-compatible" products. The MC200Air may not be compatible with some DLNA devices.

Compatibility

To use the wireless AirPlay connection features of the MC200Air, you'll need a home Wi-Fi network. You will probably need to know the network name (SSID) and password if the network is secured. The wireless AirPlay functions can be used with the following iOS devices: all iPads, the iPhone 3GS, iPhone 4 and iPhone 4S and the 2nd, 3rd and 4th generation iPod Touch. **Note:** In this manual the iPhone, iPad, iPod Touch are collectively referred to as "iOS devices".

Connecting to a computer via AirPlay requires iTunes version 10.1 or later. In order to use an iPhone, iPad or iPod Touch, they must have iOS 4.2 or later.

Unpacking and Setting Up Your MC200Air

Carefully unpack the system. Move the antenna to a vertical position. If there is any sign of damage from transit, report it immediately to your dealer and/or delivery service. Keep the shipping carton and packing materials for future use. Be sure to keep your purchase receipt in a safe place, as it may be required for warranty purposes.

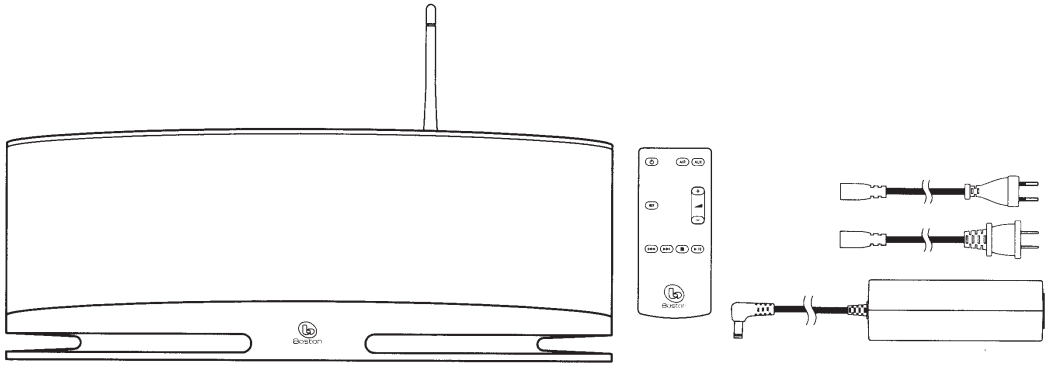

In the carton you will find the MC200Air, remote control, power supply and two power supply input cables.

Placement

Your MC200Air will sound great just about anywhere. But if you put it near a wall or corner the bass response will be enhanced. Be careful not to block the bass ports on the rear of the cabinet. The MC200Air also has "keyhole" mounts in the back of the cabinet for easy wall mounting with appropriate hardware. See the "Wall Mounting the MC200Air" section of this manual for more information.

Power Connection

Connect the appropriate power cord to the power supply and plug it into the wall outlet. Connect the power output cord to the **POWER** connector on the back of the system.

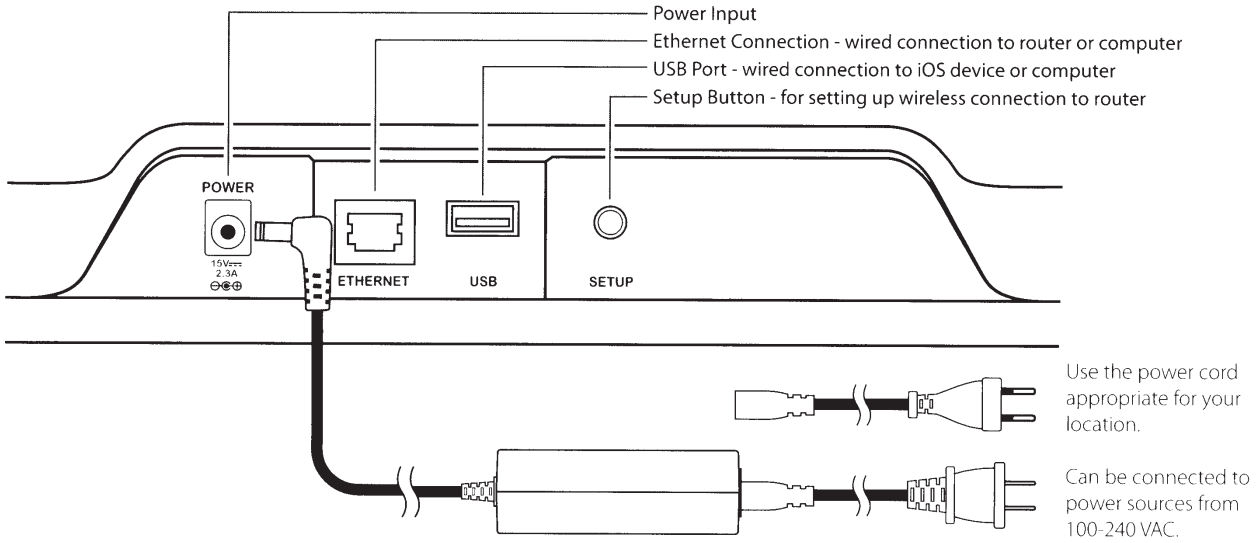
Power Input
Ethernet Connection - wired connection to router or computer
USB Port - wired connection to iOS device or computer
Setup Button - for setting up wireless connection to router
POWER
15V⎓ 2.3A
ETHERNET
USB
SETUP
Use the power cord appropriate for your location.
Can be connected to power sources from 100-240 VAC.

About the Controls

There are six buttons on the top of the MC200Air. From left-to-right they are:

⏻ power on/off – press to turn the system on or put it into standby. When the system is on, the top button lights green. When it is put into standby, the button lights red for 10 seconds then turns off. The first time the MC200Air is turned on, the button will slowly blink orange for about 40 seconds while the AirPlay circuitry gets ready.

🔇 mute – press to mute the sound or restore it to the previous volume level. When the sound is muted the button lights red.

AIR AirPlay – press the AIR button to select AirPlay or DLNA. The MC200Air can connect to your network wirelessly or via an Ethernet cable. One press connects the system to the last wireless input used. A second press switches between AirPlay and DLNA. The button lights green when AirPlay is active and connected and blue when DLNA active and connected. The button blinks orange when the MC200Air is in network setup mode. The blinking speed depends on the setup mode. See the setup information in this manual for details. The button lights red to indicate a failed connection or other errors.

AUX auxiliary input – press to select the analog auxiliary input or the USB input. If the AirPlay input is being used when the **AUX** button is pressed, the auxiliary or USB input, whichever was last used, is recalled. When the auxiliary or USB input is being used, pressing the **AUX** button again will switch to the other input. The button lights green when the USB input is selected and orange when the auxiliary input is selected. The button lights red when the USB input is selected and there is a connection error such as when no iOS device is connected, the system is not ready to accept playback from the iOS device, or failed authentication.

Note: The USB connection can charge compatible non-iOS devices, but will not play music from non-iOS devices.

— volume down – press briefly to reduce volume one step at a time. Press and hold to reduce volume quickly.

+ volume up – press briefly to increase volume one step at a time. Press and hold to increase volume quickly.

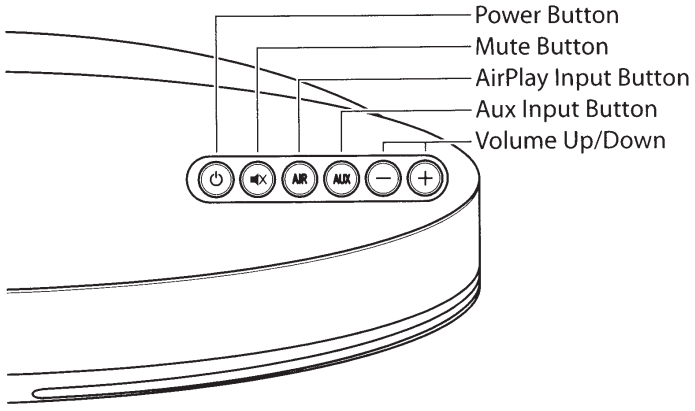

The remote control has the same six buttons which perform the same functions, In addition the remote control has music play control buttons that let you operate most AirPlay and DLNA sources. (Some music servers and apps are not compatible.):

- ►II Play /Pause
- ■ Stop
- I◄◄ Skip back, or press and hold for fast reverse
- ►►I Skip forward, or press and hold for fast forward

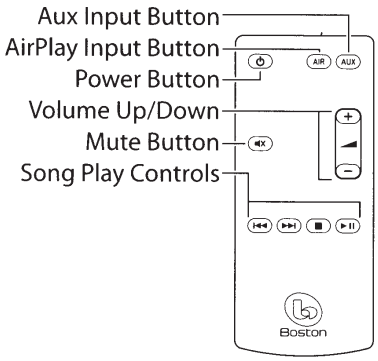

There must be an unobstructed line of sight to the front of the MC200Air when using the remote control. Point the remote control at the front panel of the MC200Air when pressing the buttons. For best results you should be within 20 feet of the unit and no more than 45° off axis.

Note: When you unpack your remote control there will be a plastic insulation tab extending from the battery compartment. This keeps the battery from being depleted. Pull out this tab before using the remote control. Eventually you'll need to replace the remote battery. If the remote doesn't reliably operate the MC200Air, put in a new CR2025 3V lithium coin-type battery.

Joining a Network

Before you can start enjoying the sound of the MC200Air, you must join the MC200Air to the same wireless (Wi-Fi), or wired (Ethernet), network being used by your music sources – iOS devices, computers, etc.

Using the MC200Air

When the MC200Air is turned on with the ⏻ button, the last input used is recalled. **Note:** When the system is turned on, it can take a few seconds to be ready to play music.

AirPlay Mode

An Airplay connection can be either a wireless connection or a wired connection via an Ethernet cable. A wired Ethernet connection will override a wireless connection.

When the AirPlay input is active the **AIR** button lights green. If you don't hear music it is probably because the source is not playing. If a wi-fi signal is not found the button lights red. See the Making Wireless Connections section for more information.

DLNA Mode

Press the **AIR** button on the top, or on the remote control, to switch between DLNA and AirPlay inputs. When the DLNA input is active the **AIR** button lights blue. **Note:** The **AIR** button **must** be lit blue in order to stream music via DLNA.

An alternative to the AirPlay connection, DLNA (Digital Living Network Alliance) allows you to connect to a compatible DLNA music server wirelessly, or via an Ethernet cable. For example, you can use the Windows 7 Media Player "Play To" feature on your computer, or a DLNA app on an Android phone.

USB Mode

You can connect iOS devices (Macintosh computers, iPods, iPads and iPhones) directly to the MC200Air via the USB input. Use the same Apple USB sync cable that was supplied with your iOS device. Portable iOS devices are also charged while connected to this input. The **AUX** button is used to select both the USB input and the analog Auxiliary input. The button lights green when the USB input is selected and orange when the Auxiliary input is selected. Press the **AUX** again if necessary to switch from one input to the other.

When an iOS device is connected to the USB input, the song play controls on the remote can be used to start, stop or pause song play, skip forward or backward, and fast forward or rewind.

Auxiliary Mode

Press the **AUX** button on the top or on the remote control. The button on the top will light orange. The MC200Air can accept an analog signal from a wide range of sources, such as CD players and non-iOS MP3 players. You'll need a cable with standard 1/8" (3.5mm) stereo plugs to connect between the output of the source and the auxiliary input on the left side of the system.

Note: The analog output signals from some sources can be fairly strong. If the volume level of the source device is turned up, it could overload the inputs of the MC200Air. This will not cause damage, but if you hear distortion, try turning down the volume control of the source device. Similarly, if you do not hear music when the auxiliary input is selected, check to be sure the source is playing and that the volume control is not turned down all the way.

Connecting Headphones

Connect the headphone plug to the 1/8" (3.5mm) jack beside the 🎧 symbol. This turns off the MC200Air internal speakers.

Making Wireless (Wi-Fi) Connections

Before the wireless AirPlay or DLNA connection features can be used, the MC200Air must join to your wireless (Wi-Fi) network. The easiest and most common way to do this is via a WPS (Wi-Fi Protected System) connection to a wireless router that supports WPS connections. A Wi-Fi connection can also be established through the use of a temporary connection, directly to the MC200Air.

Before starting the process of setting up a wireless connection:

- Be sure you know the name and password of your Wi-Fi network.
- Be sure your Wi-Fi network is active.

Carefully follow each step described in the following sections to ensure successful connection.

Option 1 – Easiest Method - Push Button Setup (easiest method)

1 *Disconnect the power supply from the MC200Air about 10 seconds.* Then reconnect the power supply and press the ⏻ button to turn the system on. The ⏻ button will fast-blink orange for about 20 seconds, then light green, indicating the MC200Air is ready.

2 Quickly press and release the **SETUP** button the back of the MC200Air. Then press the WPS button on your router. **Note:** The WPS button may be on the front, top or back of the router. On some routers, the WPS button may be labeled with a symbol. See the instructions for your router to identify the WPS button.

Then, when the **AIR** button changes from blinking orange to being lit green, a connection is established. This may take a couple of minutes.

If there is a connection failure the **AIR** button lights red. Try the process again, and also see the Troubleshooting section for more information.

You may want to change the name assigned to the MC200Air. For example, if you have more than one MC200Air in your home, you'll want to be able to know which system you are using. See the following section, and follow steps 1-4 and 8 to change the name. **Note:** If you change the name assigned to your MC200Air, it will remember all previously established connections.

Option 2 – System Setup Using Wi-Fi

Note: The screen images shown are those for the versions of the Mac iOS or Windows that were current at the time of publication.

1 *Disconnect the power cord from the back of the MC200Air for about 10 seconds*. Reconnect the power cord to the MC200Air. Press the ⏻ button. If the ⏻ button is flashing orange, wait for it to light solid green, then go to the next step.

2 Press ***and hold*** the **SETUP** button on the back of the MC200Air for about 5-8 seconds – until the **AIR** and ⏻ buttons blink orange. The ⏻ button will flash orange while the system reboots. Wait for it to turn solid green, then go to the next step. **Note:** During the entire Wi-Fi network setup process, the **AIR** button will blink orange

3 Click on the "Wi-Fi Selection" icon in your computer tool bar, or locate the Wi-Fi configuration app for your iOS device. Turn on Wi-Fi if it is off. Select "MC200Air_Setup" from the list of available networks.
Note: Sometimes it may take up to a minute for "MC200Air_Setup" to appear as a choice in the list of available networks.

Examples of Wi-Fi Selection Windows

Macintosh OSX

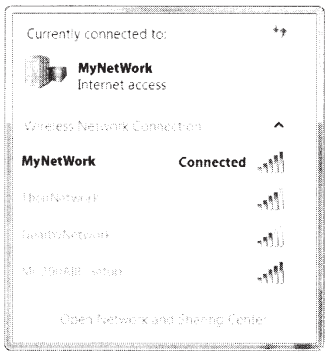

Windows 7

iOS on iPhone

4 Launch a web browser such as Internet Explorer®, Safari®, Firefox®, etc. Enter **http://192.168.1.12** in the address bar.

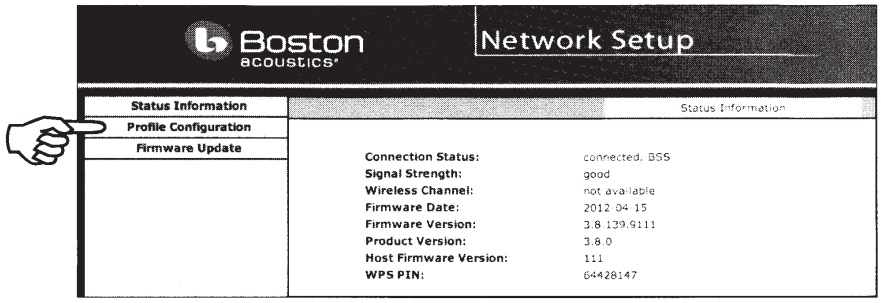

5 Click on "Profile Configuration".

6 Select the Wi-Fi network you want to use from the Service Set ID drop down list. Click Apply. If your network requires a password you will need to enter it. Enter the password carefully – it is case sensitive.
Tip: If you want to rename the system you may do this first. Enter a new name in the "Digital Media Player Name" box, then click "Apply".

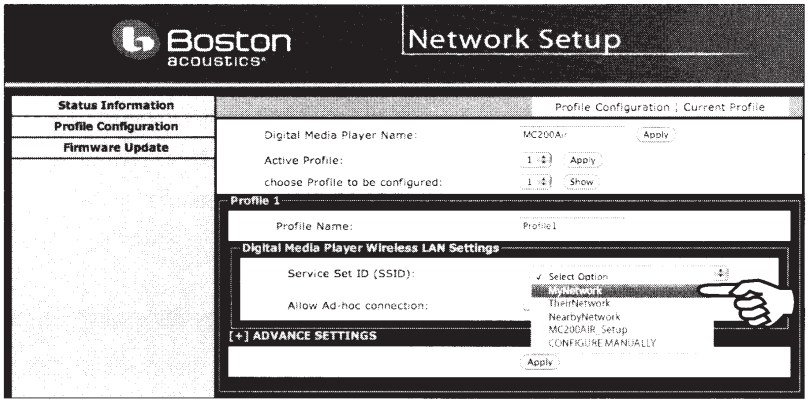

7 An information box will be displayed - click OK.

8 The ⏻ button will flash orange while the system reboots. The **AIR** button will flash green while the MC200Air establishes a connection. When the connection process is complete the **AIR** button lights solid green.

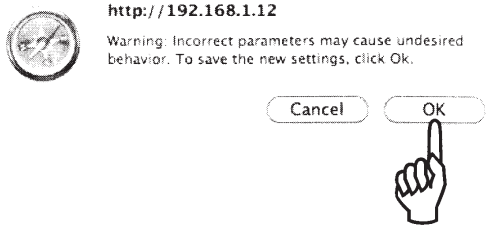

If you decide later that you want to rename your MC200Air, repeat the above steps 1-4 and 8, without selecting a Wi-Fi network.

Option 3 - System Setup Using an Ethernet Cable

Note: This process can take 10-15 minutes.

1 *Disconnect the power cord from the back of the MC200Air for about 10 seconds.* Turn off the internal Wi-Fi system of your computer, if this is how it is normally connected to the internet.

2 Connect an Ethernet cable between the Ethernet port of the MC200Air and the Ethernet port on your computer.

3 Reconnect the power cord to the MC200Air. Press the ⏻ button.

4 It will take 3-4 minutes for your computer and the MC200Air to connect. Be patient. Here's what will happen: The ⏻ button flashes orange while the system reboots, then turn solid green. The **AIR** button will fast-blink green while the connection to your computer is established. ***Do not go to step 5 until the AIR button lights solid green.*** This indicates your computer is ready to communicate with the MC200Air.

5 Launch a web browser such as Internet Explorer®, Safari®, Firefox®, etc. Enter **http://169.254.1.1** in the address bar.

6 Click on "Profile Configuration".

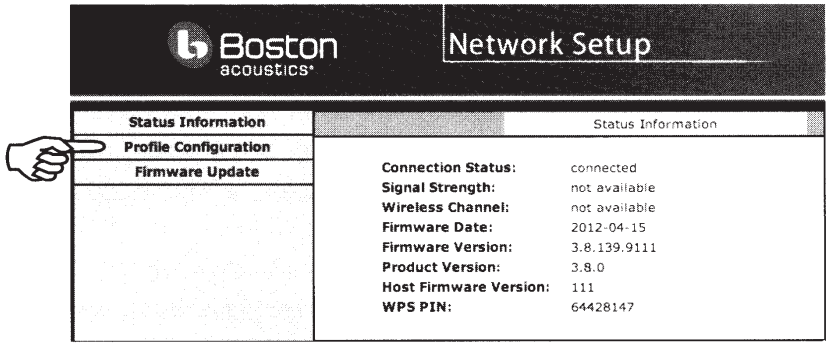

7 Select the Wi-Fi network you want to use from the Service Set ID drop down list. Click Apply. If your network requires a password you will need to enter it. Enter the password carefully – it is case sensitive.
Tip: If you want to rename the system you may do this first. Enter a new name in the "Digital Media Player Name" box, then click "Apply".

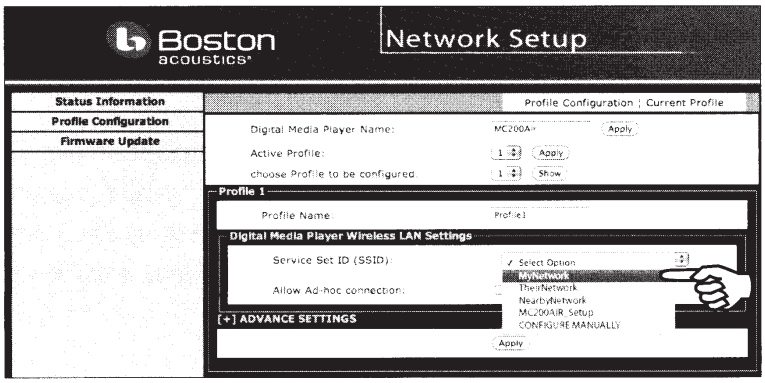

8 An information box will be displayed - click OK.

9 Disconnect the Ethernet cable and power supply from the MC200Air. Wait several seconds, then reconnect the power supply.

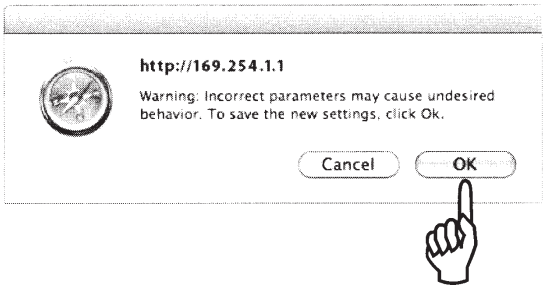

10 Press the ⏻ button. The system will restart and be ready to go. The **AIR** button will fast-blink green while the MC200Air establishes a connection to your network. When the connection process is complete the **AIR** button lights solid green.

Tip: If you decide later that you want to rename your MC200Air, repeat the above steps without selecting a Wi-Fi network.

After set up, disconnect the Ethernet cable between the MC200Air and your computer. Remember to turn back on the internal Wi-Fi system of your computer (if you normally use Wi-Fi).

Using the MC200Air With a Wired Network Connection

In some situations, connecting the MC200Air using a wired network connection will result in better performance. When it is used wirelessly, the MC200Air competes for "bandwidth" (data volume capacity) with the other "traffic" on your Wi-Fi network, such as video streaming or downloading any type of file. When the data demands of the wireless devices on your network reach the data capacity limits of your Wi-Fi system, "drop outs" and "freezes" and other types of interruptions can occur. A wired connection removes the MC200Air from the wireless data load.

If the MC200Air is located near your (wireless) router, or near a wired network connection, you can connect it directly to your network with an Ethernet cable. You'll just need an appropriate length "CAT 5" or "CAT 6" cable with RJ45 connectors.

When the MC200Air is used this way, AirPlay (or DLNA) will function normally with a wireless (iOS) device or a wired Ethernet connection to a computer. If you have more than one MC200Air, a combination of wireless and wired systems may be used.

Using AirPlay

With iOS devices, you use the Music app to control music play. Once you have connected the MC200Air to your network, the AirPlay icon will appear on the iTunes screen. Touch the icon to display a list of output devices – the iOS device and the other AirPlay connected systems. Touch the name of a system to connect to it.

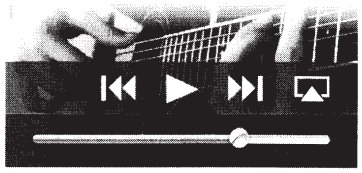

Note: There are numerous iOS apps, such as those that stream special radio channels, that will also display the AirPlay icon on their screen so you can select the MC200Air as your output device. If an app does not display the AirPlay icon, it may be necessary to go to iTunes, select the MC200Air from the AirPlay output list, then return to your streaming app.

Also note that if the sound is paused or off for some time, it may be necessary to re-select the MC200Air.

iTunes on your computer can connect to several MC200Air systems at the same time and individually control the volume of each system. Click on the icon at the bottom of the iTunes window. Then click "Multiple Speakers . . . " from the pop up list. The Multiple Speakers control box will open. Check the output systems you want to use and adjust the volumes as needed.

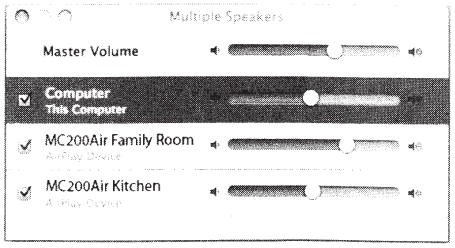

Song Play Remote Control

In order to use the song control buttons on the remote control (Play, Pause, etc.), you need to set up iTunes to allow for "audio control from remote speakers." From the iTunes menu on a iOS device select Preferences. On a PC select Edit and then preference. Click on the Devices icon at the top of the window. Then click on the check box next to " Allow iTunes audio control from remote speakers". Then click the OK button.

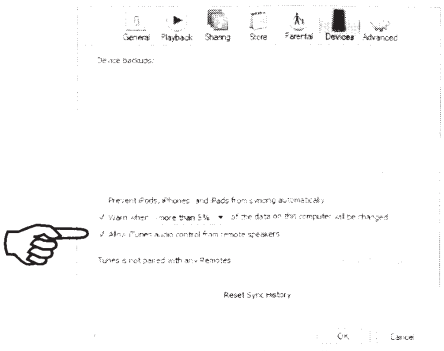

Using DLNA

Because so many different manufacturers make DLNA capable devices, it is difficult to give specific information on how to use the DLNA features. Please refer to the instructions for your device for specific information. In general the process of playing a DLNA device through the MC200Air goes something like this:

Be sure that your Wi-Fi network is active, the DLNA device you want to connect is on and the MC200Air is on. Open the DLNA control application on your device. Select "Share Media". From there, follow the menus to the "settings" screen. Typically you have the option to play music from your wireless device, or to "push" music from a computer to the MC200Air.

Notes and Tips

When the MC200Air is turned off it still may feel slightly warm. That's because some circuitry remains active even when the MC200Air is off. This allows a remote command to turn on the MC200Air.

The MC200Air may automatically turn itself on and begin playing. If you start playing music from a source device that is connected to your network via AirPlay, the MC200Air will "wake up" and begin playing.

After 30 minutes of inactivity, the MC200Air will go into a low power standby mode. If music play is restarted, the MC200Air will resume playing. There may be a slight delay while the system comes out of standby mode.

If you have two or more MC200Air systems, you will want to give each a unique name to make it easy to select the one you want to use. See the setup Option 2 (System Setup Using Wi-Fi) for details on how to customize the names of your systems.

Wall Mounting the MC200Air

The MC200Air can be wall mounted using the keyhole openings on the back of the system. Install two M5 or equivalent screws in the wall . They must be exactly $3^{15}/_{16}$" (100mm) apart, and level with each other. Leave about $^{3}/_{16}$" (5mm) of the screw shaft exposed so the head of the screw can engage the keyhole opening. Carefully position the MC200Air keyhole openings over the screw head and set it in place. Be sure the cabinet is firmly mounted on the screw heads before you let go of the system.

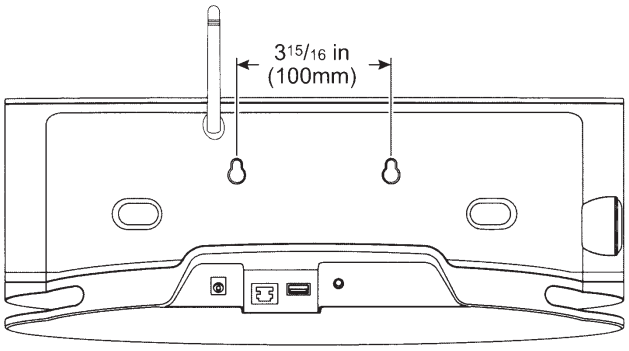

Troubleshooting

The MC200Air does not turn on.

Plug a lamp into the wall power outlet to be sure the outlet has power. Check all the power connections to be sure everything is completely plugged in – the power cord to the wall outlet, the power cord to the power supply, and the power supply output cable into the back of the system.

What should I do if the network connection process fails?

- Try "power cycling" – that is, do a complete, cold shut down and restart – of the various components of the network, such as the wireless router, or your computer if you are playing from iTunes. Some devices may need to have their power supplies disconnected in order to be completely powered off.
- Try adjusting the antenna to a different position and re-try the connection process.
- Check to be sure your router is "discoverable". This means that the router will "broadcast" to other devices, letting them know that is it active and will not require you to know the network name of the router. See your router instructions for more information.
- Be sure your router does not "hide" its SSID name. To enhance security, some routers "hide" their SSID names. See the instructions for your router for information on how to "unhide" the router name.
- Be sure the SSID name of your router has only normal characters and digits. Do not use symbols or punctuation characters. See the information in the Option 2 connection section.
- Turn off the WEP encryption system if your router has it. The MC200Air will not connect to a network when this security system is active. Turn it back on when you are done with the network connection process. See your router instructions for more information.

When using the Option 2 network connection method, the Network Setup window does not appear when I enter "http://169.254.1.1" in the browser address window.

Check the "proxy" setting of your browser. If necessary reset the browser to allow connections without the use of proxies.

The MC200Air is on and connected to my network (the AIR button is lit green) but no music is playing.

- Be sure the source is actually playing, not paused or stopped.
- Check the ◀X (mute) button to be sure it is not lit red.
- Press the + volume up a couple of times to be sure the MC200Air volume level is not turned all the way down.
- Check the network settings for the music source – iOS device, DLNA device or computer. Be sure Wi-Fi is active and it is connected to your network. The AirPlay icon should appear at the bottom of the iTunes window.
- If the music source is a computer, be sure its volume level is not turned down all the way, or that its sound is muted.
- Try turning the Wi-Fi system off and back on. Try "power cycling" your device. Try power cycling your router. **Note:** The latest and most capable network is the "class n" system (more completely it is designated the "IEEE 802.11n" system). Older routers used the "class g" or "class b" system. Many routers will connect to all three systems, "n", "g" or "b". The MC200Air operates with "n", "g" or "b" systems, however, it will not connect to a router that is "class n" only, nor on a limited access "guest" network.

Why does my music sometimes stop briefly and then start playing again?

Other network traffic, such as downloading files or streaming movies from the internet, may cause brief drop outs. Try reducing the number of devices using the network.

I think I entered the password wrong during the set up – what do I do?

Do set up again. See the Option 2 connection information, step 5.

Updating the MC200Air Firmware

To update the firmware of the MC200Air, you must use a Macintosh computer or a PC running the Safari web browser. Safari is the standard web browser for Macintosh computers. If you have a PC, you will need to download Safari from the Apple web site.

Note: The computer should be connected to a power supply. Do not try to do the firmware upgrade using a computer running on battery power.
Note: Do not remove power or turn off the MC200Air during the update process.

1 Download and save the latest firmware upgrade from www.bostonacoustics.com.

2 Turn on MC200Air. Wait until the ⏻ and **AIR** buttons stop blinking.

3 Play some music from iTunes on your computer to verify that it and MC200Air are on the same Wi-Fi network.

4 Go back to Safari on your computer.

5 Click on Show All Book Marks Icon 📖.

6 Select BonJour from the list on the left side of the window.

7 Double click on the name of your MC200Air in the bookmarks list. This will bring up the Boston Acoustics network setup page. **Note:** If your MC200Air does not appear on the list, be sure it is connected to the same network.

8 Click on Firmware Update to bring up the firmware update page.

9 Chose the option Firmware Update from Network. Click OK

10 Follow the instruction to complete the firmware update

After the firmware update, the MC200Air should work normally. However, in some cases, it may be necessary to disconnect and reconnect the power. It may also be necessary to setup the network connection again.

Limited Warranty

Boston Acoustics warrants to the original purchaser of the MC200Air that it will be free of defects in materials and workmanship in its mechanical parts for a period of one year from the date of purchase.

Your responsibilities are to install and use the MC200Air according to the instructions supplied, to provide safe and secure transportation to an authorized Boston Acoustics service representative, and to present proof of purchase in the form of your sales slip when requesting service.

Excluded from this warranty is damage that results from abuse, misuse, improper installation, accidents, shipping, or repairs/modifications by anyone other than an authorized Boston Acoustics service representative.

This warranty is limited to the Boston Acoustics product and does not cover damage to any associated equipment. This warranty does not cover the cost of removal or reinstallation. This warranty is void if the serial number has been removed or defaced. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If Service Seems Necessary

First, contact the dealer from whom you purchased the product. If that is not possible, write to:

Boston Acoustics, Inc.
100 Corporate Drive
Mahwah, NJ 07490 USA

Canada

First, contact the dealer from whom you purchased the product. If that is not possible, send an email to: support@dmcanada.ca

All Other Countries

Contact the dealer from whom you purchased the product or contact your local distributor.

We will promptly advise you of what action to take. If it is necessary to return your MC200Air to the factory, please ship it prepaid. After it has been repaired, we will return it freight prepaid in the United States and Canada.

For EU Customers Only

This symbol found on the product indicates that the product must not be disposed of with household waste. Instead, it may be placed in a separate collection facility for electronic waste or returned to a retailer when purchasing similar product. The producer paid to recycle this product. Doing this contributes to reuse and recycling, minimizes adverse effects on the environment and human health and avoids any fines for incorrect disposal.

This symbol, if found on the battery, indicates that it must not be disposed of with household waste or incinerated. Instead, it may be placed in a separate collection facility for batteries in accordance with local regulations. Doing this contributes to reuse and recycling, minimizes adverse effects on the environment and human health and avoids any fines for incorrect disposal.

The following symbols, if found on the battery have these meanings: "Hg" means mercury. "Cd" means cadmium. "Pb" means lead. These symbols indicate that the battery contains these heavy metals.

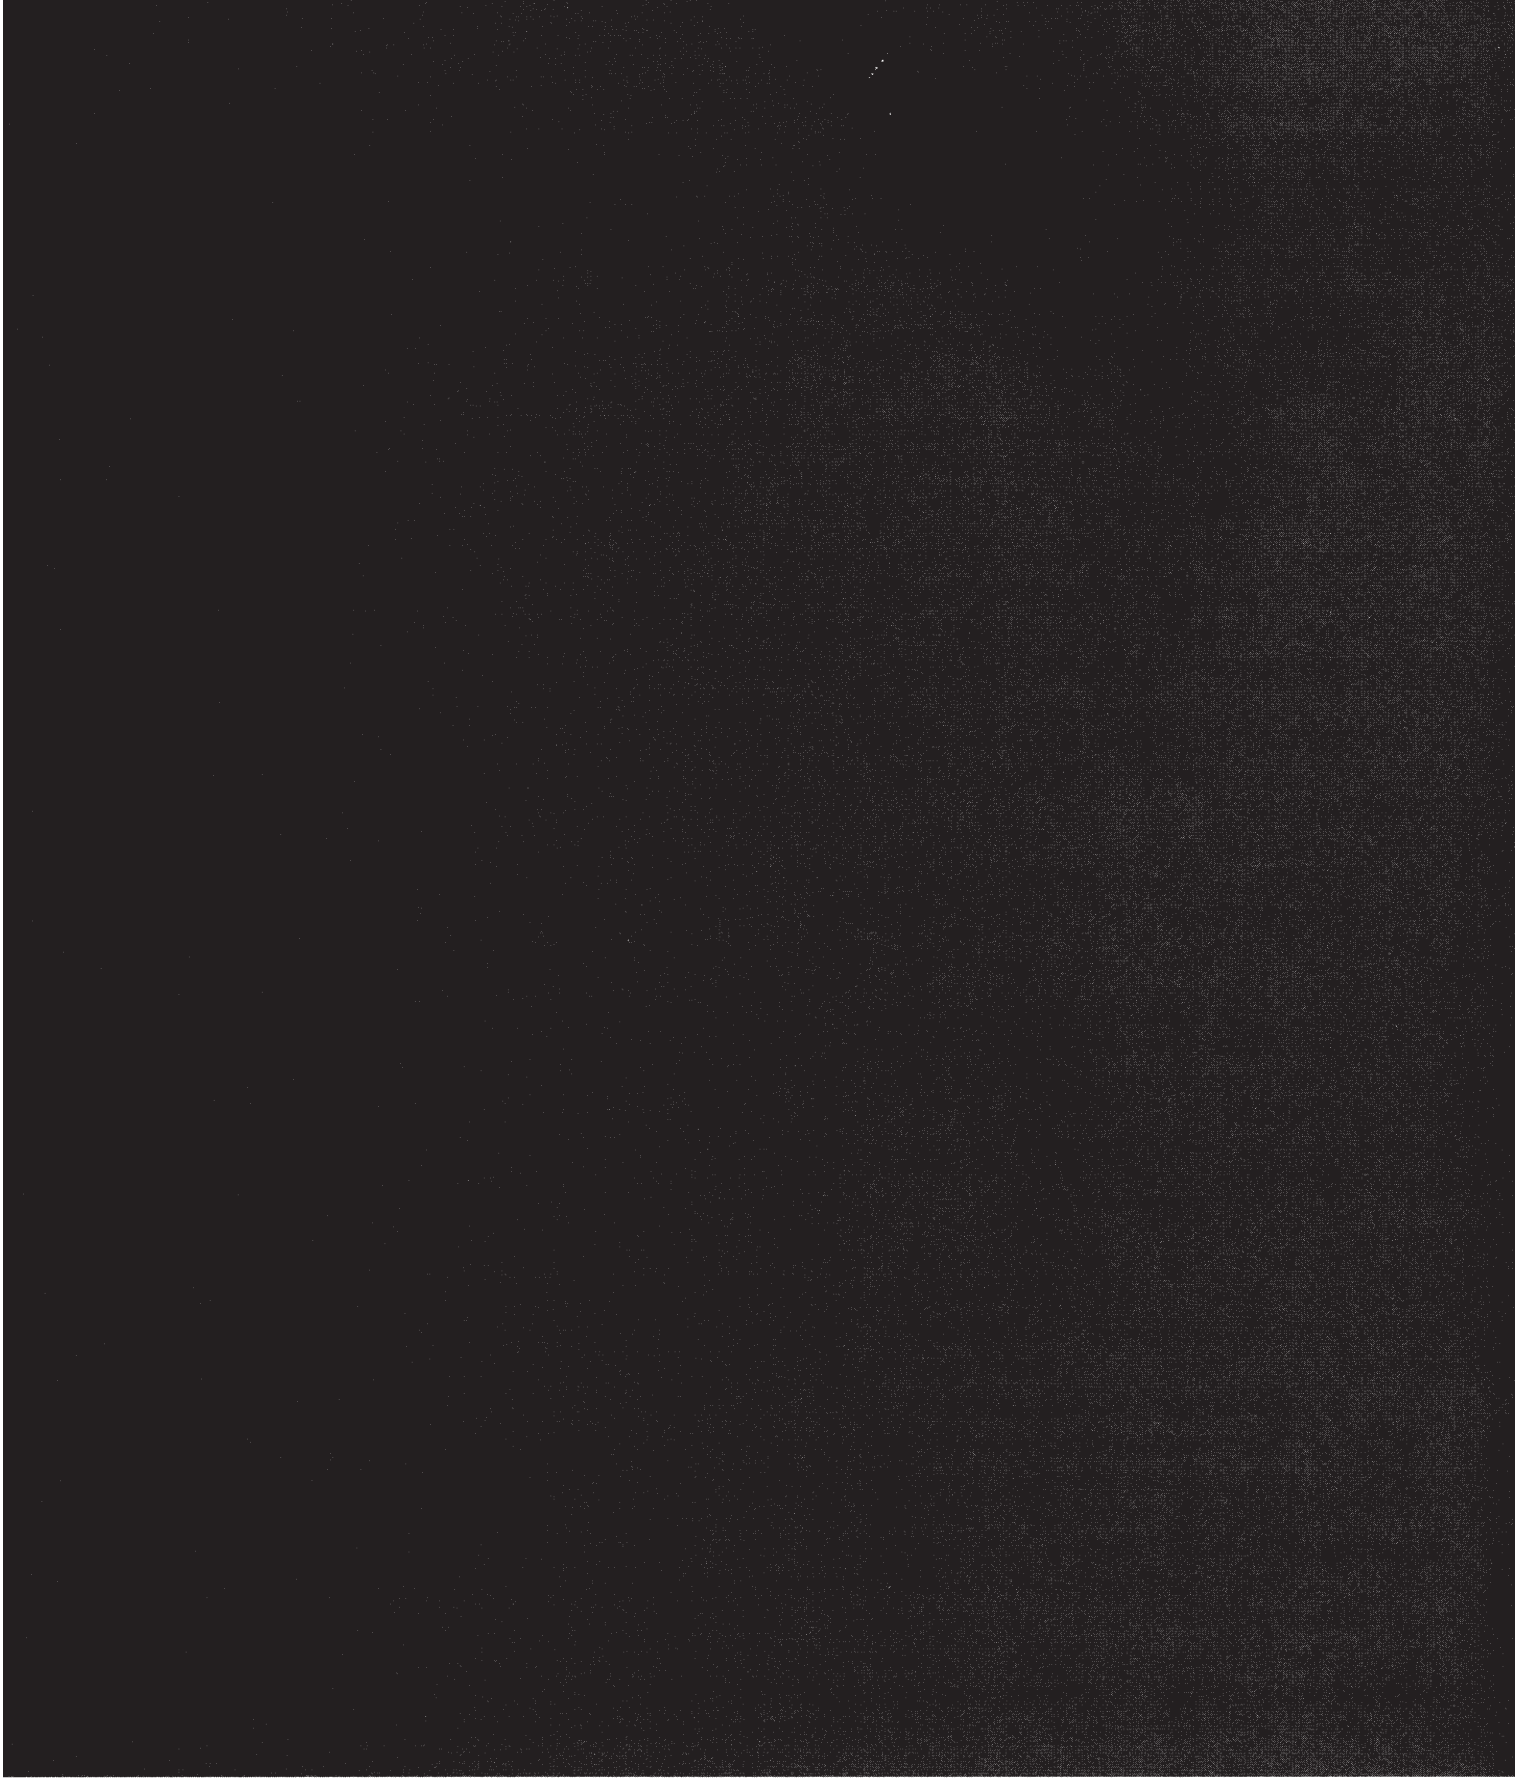

7 Constitution Way, Woburn, MA 01801 USA
bostonacoustics.com

142-004175-1

MC200Air

Quick Start Guide

Guide de démarrage rapide / Guía de Inicio Rápido
Guida rapida / Snabbstartsguide / Kurzanleitung

1 What you need.

Ce qu'il vous faut | Qué debe hacer | Cosa occorre
Vad du behöver | Erforderliche Geräte

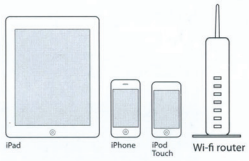

2 Connect the power supply. Press and release the ⏻ button.

Branchez l'alimentation.
Appuyez et relâchez le bouton ⏻.

Conecte la fuente de alimentación.
Presione y suelte el botón ⏻.

Collegare l'alimentazione. Premere il pulsante ⏻ e rilasciare la pressione.

Anslut nätaggregatet. Tryck ner och släpp ⏻-knappen.

Schließen Sie das Netzkabel an. Drücken Sie die Taste ⏻ und lassen Sie diese wieder los.

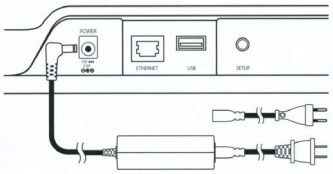

3 **Wait** for the ⏻ button to change from flashing orange to green.

Attendez que le bouton ⏻ change du clignotement orange au vert.

Espere hasta que el botón ⏻ cambie de intermitente naranja a verde.

Attendere che il pulsante ⏻ passi da arancione lampeggiante a verde.

Vänta tills ⏻-knappen slutar blinka orange och lyser grön.

Warten Sie, bis die Taste ⏻ nicht mehr orange blinkt, sondern grün leuchtet.

4 Push and hold the **SETUP** button on the back of the unit for 5-8 seconds until the **AIR** button slow-blinks orange.

Poussez et maintenez le bouton **SETUP** au dos de l'appareil pendant 5 à 8 secondes jusqu'à ce que le bouton **AIR** clignote lentement en orange.

Presione y mantenga presionado el botón **SETUP** que está en la parte posterior de la unidad durante 5-8 segundos hasta que el botón **AIR** se ponga en intermitente naranja lento.

Premere il pulsante **SETUP** presente sul retro dell'apparecchio e mantenere la pressione per 5-8 secondi fino a quando il pulsante **AIR** non lampeggia lentamente in arancione.

Tryck och håll ner **SETUP**-knappen på baksidan av enheten i 5-8 sekunder tills **AIR**-knappen långsamt blinkar orange.

Drücken Sie die Taste **SETUP** hinten am Gerät und halten Sie diese etwa 5 - 8 Sekunden lang gedrückt – so lange, bis die Taste **AIR** langsam orange blinkt.

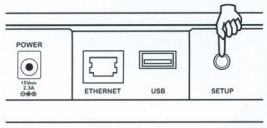

5 Go to SETTINGS on your iOS Device. Select Wi-Fi and click on MC200Air_Setup.

Aller à SETTINGS à votre appareil iOS. Sélectionnez une connexion Wi-Fi et cliquez sur MC200Air_Setup.

Vaya a CONFIGURACIONES en su Dispositivo iOS. Seleccione Wi-Fi y haga clic en MC200Air_Setup.

Recarsi su SETTINGS nel dispositivo iOS. Selezionare Wi-Fi e cliccare su MC200Air_Setup.

Gå till INSTÄLLNINGAR på din iOS-enhet. Välj Wi-Fi och klicka på MC200Air_Setup.

Wechseln Sie auf Ihrem mit iOS laufenden Gerät zu EINSTELLUNGEN (SETTINGS). Wählen Sie W-LAN (Wi-Fi) aus, und klicken Sie auf MC200Air_Setup.

Boston acoustics®

MC200Air

Quick Start Guide

French Quick Start Guide / Spanish Quick Start Guide
Italian Quick Start Guide / Swedish Quick Start Guide / German Quick Start Guide

6 Launch a web browser and enter **http://192.168.1.12**

Lancez un navigateur Web et entrez **http://192.168.1.12**
Inicie un navegador y escriba **http://192.168.1.12**
Lanciare un browser Web e digitare **http://192.168.1.12**
Öppna en webbläsare och mata in **http://192.168.1.12**
Starten Sie einen Webbrowser. Geben Sie **http://192.168.1.12** ein.

7 Click on Profile Configuration

Cliquez sur Configuration du Profil

Haga clic en Configuración de perfil

Cliccare su "Configurazione profilo".

Klicka på Profilkonfigurering

Klicken Sie auf „Profilfestlegung" (Profile Configuration).

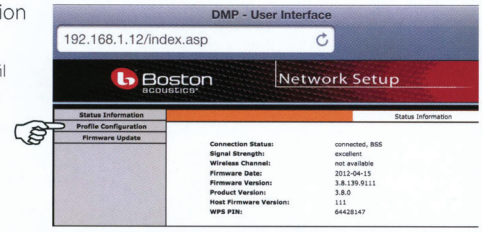

8 Select your Wi-Fi network from the drop down list. **Note:** If your Wi-Fi is password protected, you will need to enter your password here.

Sélectionnez votre réseau Wi-Fi à partir de la liste déroulante. **Remarque :** Si votre réseau Wi-Fi est protégé par mot de passe, vous devrez entrer votre mot de passe ici.

Seleccione su red de Wi-Fi de la lista desplegable. **Nota:** Si su Wi-Fi está protegida con una contraseña, tendrá que escribir su contraseña aquí.

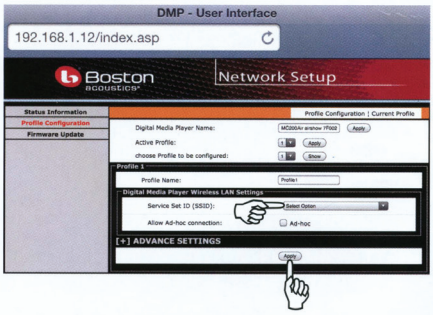

Selezionare la rete Wi-Fi dall'elenco a discesa. **Nota bene:** se la rete Wi-Fi è protetta da password, quest'ultima andrà inserita a questo livello.

Välj ditt Wi-Fi-nätverk från rullgardinslistan. **Obs!** Om ditt Wi-Fi-nätverk är lösenordsskyddat, så måste du ange lösenordet här.

Wählen Sie über die Dropdownliste das W-LAN-Netzwerk aus, das Sie verwenden wollen. **Bitte beachten Sie:** Wenn Ihr W-LAN-Netzwerk mit einem Passwort geschützt ist, müssen Sie dieses hier eingeben.

9 Click "Apply".

Cliquez sur « Apply ». | Haga clic en "Aplicar". | Cliccare su Applica.

Klicka på "Tillämpa". | Klicken Sie auf „Anwenden" (Apply).

10 Click OK when the warning window pops up.

Cliquez sur OK lorsque la fenêtre d'avertissement apparaît.

Haga clic en OK cuando aparezca la ventana de advertencia.

Cliccare su OK quando compare la finestra di avviso.

Klicka på OK när varningsfönstret visas.

Ein Fenster mit einer Warnmeldung wird u. U. aufgerufen. Klicken Sie auf OK.

When the **AIR** button lights solid green, you are ready to play your MC200Air! Look for the AirPlay symbol on your iPhone/iPod/iPad and press to play your music through your MC200Air.

Lorsque les boutons **AIR** s'allume en vert continu, vous êtes prêt à jouer votre MC200Air ! Recherchez le symbole AirPlay sur votre iPhone / iPod / iPad et appuyez pour jouer votre musique à l'aide de votre MC200Air.

Cuando la luz del botón **AIR** se ponga fija en verde, ¡ya está listo para reproducir su MC200Air! Busque el símbolo AirPlay de su iPhone/iPod/iPad y presione para reproducir su música a través de su MC200Air.

Quando il pulsante **AIR** si illumina di verde, siete pronti a suonare l'MC200Air! Cercate il simbolo AirPlay sull'iPhone/iPod/iPad e premetelo per riprodurre la musica tramite l'MC200Air.

När **AIR**-knappen lyser stadigt grön kan du spela upp på din MC200Air! Lokalisera AirPlay-symbolen på din iPhone/iPod/iPad och tryck på den för att spela upp din musik genom MC200Air.

Wenn die Taste **AIR** in einem kräftigen Grün leuchtet, ist MC200Air bereit für die Wiedergabe! Suchen Sie das AirPlay-Symbol auf Ihrem iPhone/iPod/iPad, und drücken Sie darauf, um Ihre Musik über Ihren MC200Air abzuspielen.

See page 8 - 11 for other ways of connecting to your MC200Air.

Voir pages 22 –25 pour les autres manières de connecter votre MC200Air.
Vea la página 36-39 para conocer otras formas de conectarse a su MC200Air
Si vedano le pagine 50 - 53 per ulteriori modalità di collegamento all'MC200Air.
Se sidan 64 - 67 för andra sätt att ansluta till din MC200Air
Auf Seite 78 - 81 sind weitere Möglichkeiten beschrieben, sich mit Ihrem MC200Air zu verbinden.

Boston acoustics®
7 Constitution Way
Woburn, MA 01801
boston acoustics.com

© 2012. All rights reserved. Boston, Boston Acoustics, and the B/A ellipse symbol are registered trademarks of Boston Acoustics, Inc.
142-004255-0

CAUTION:
For use in US and Canada only.
In other areas, please do not use.

ATTENTION :
Pour utilisation uniquement aux États-Unis et au Canada.
Ne pas utiliser dans les autres pays/régions.

PRECAUCIÓN:
De uso exclusivo en EE.UU. y Canadá.
Para otras áreas, descártelo y no lo utilice.

注意：
僅适用于美國和加拿大。在其他地區，請棄用。